

12V Landscape Light Specialist



TSP300 INSTALLATION GUIDE

www.ABBALightingUSA.com


RATED VOLTAGE 12V


Congratulations on your purchase of this high-quality product! We want to ensure that you have the best possible experience with it, so we kindly ask that you take a moment to carefully read and follow all instructions before assembly, installation, and use. By doing so, you'll not only guarantee correct function and safety, but also optimize the full potential of this exceptional product. Thank you for choosing us as your trusted provider of top-notch products - we truly appreciate your business!

WARNING: TO REDUCE THE RISK OF FIRE OR INJURY TO PERSONS:

- For safety reasons, we recommend that only a qualified professional install this electrical product.
- Before attempting to install this unit, ensure all power connections are off for your own safety.
- Fixture(s) must be installed in accordance with all local codes and ordinances.
- Do not instal within 10 feet of a pool, spa or fountain
- DO NOT DISASSEMBLE
- To ensure proper functionality and safety, it is important to refrain from connecting two or more transformers in parallel. It is advised to maintain individual electrical circuits for each transformer rather than attempting to combine their outputs. By adhering to this guideline, you can prevent potential complications and optimize the performance of each transformer.
- For optimal performance and safety, it is recommended not to utilize this device in conjunction with a dimmer switch. Avoid connecting the device to any dimming mechanism as it may lead to undesirable consequences or malfunctioning. It is advisable to operate the device without the use of a dimmer to ensure its intended functionality and prevent any potential risks.
- To ensure the highest level of safety, it is recommended to directly plug the transformer into a Ground Fault Circuit Interrupter (GFCI) outlet. By utilizing a GFCI outlet, you enhance protection against electrical shocks and minimize the risk of electrical hazards.



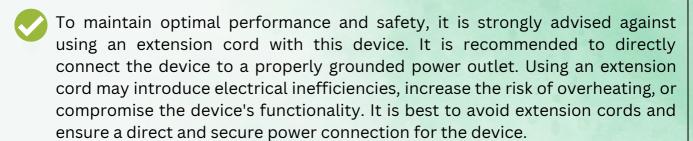


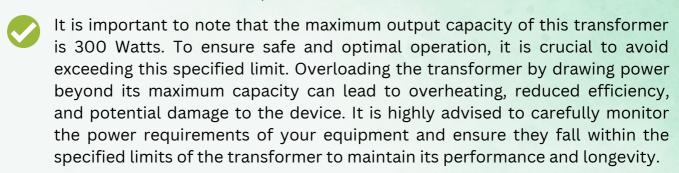

WARRANTY

- We stand behind the quality of our product and offer a 3-year warranty from the date of purchase. Please note that the warranty is valid from the date of purchase, not from the date of installation. Kindly ensure that you keep the proof of purchase as it will be required for any warranty claims.
- Warranty will be void if there is any damage due to improper usage or modification to the fixture.
- Failure to comply with the instruction in this manual may increase the risk of damage or injury and will void warranty.

We assure you that this transformer is designed with utmost consideration for safety, making it suitable for both indoor and outdoor applications. You can confidently utilize this transformer in various environments without any concerns about compromising safety standards. Moreover, it is essential to note that this transformer is specifically engineered to be weatherproof, offering enhanced protection against the elements. This means that you can rely on its performance and durability even when exposed to challenging weather conditions. Whether you are working on a project indoors or venturing into outdoor settings, this transformer provides a secure and dependable solution for your electrical needs.

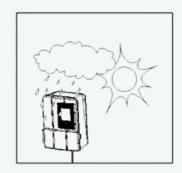

To ensure proper installation of the transformer, it is essential to position it at a level where the controls are readily visible and easily accessible. This ensures convenient operation and maintenance of the transformer. When selecting the installation location, carefully consider factors such as line of sight and ergonomic accessibility. By placing the transformer at an appropriate level, you will be able to monitor and adjust its settings with ease, facilitating efficient and effective usage. Prioritizing the visibility and accessibility of the controls when installing the transformer contributes to a user-friendly and ergonomic setup.



It is crucial to avoid installing the transformer in a position that obstructs or blocks the sensor responsible for the dusk-to-dawn mode. When choosing the installation location, be mindful of the sensor's line of sight and ensure that it remains unobstructed. Placing the transformer in a position that allows the sensor to function optimally ensures the proper operation of the dusk-to-dawn mode, which automatically adjusts the transformer's functionality based on ambient light levels. By preventing any obstructions to the sensor, you guarantee the reliable and accurate performance of this mode, enhancing the overall efficiency and effectiveness of the transformer's operation.



MOUNT THE INSTALLATION


To mount the transformer on a wall near an electrical outlet, carefully follow these step-by-step instructions:

- Choose a suitable location on the wall near the electrical outlet where you intend to install the transformer. Ensure that the chosen spot allows for easy access to the outlet and is appropriate for the weight and size of the transformer.
- Hold the transformer against the wall at the desired mounting height. Position it in a way that aligns with the electrical outlet and any necessary connections.
- With a pencil or marker, mark the spots on the wall where the screw holes of the transformer will align. These marks will serve as a guide for secure mounting.





- Obtain appropriate screw that are compatible with the wall material and the transformer's mounting hole. Generally, wall anchor may be necessary for mounting on drywall or other fragile surfaces. If unsure, consult a hardware store or professional for suitable mounting hardware.
- Using a suitable screwdriver or drill, carefully insert the screw through the mounting holes of the transformer and into the marked spots on the wall. Ensure that the screws are driven straight and fully into the wall, providing a secure hold.
- Once the screws are tightly secured, verify that the transformer is firmly mounted on the wall by giving it a gentle tug or shake. Ensure that it does not move or feel loose.

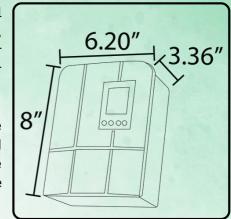

Please ensure that you do not exceed the capacity of the transformer as it can lead to overheating and overload, potentially reducing its lifespan. It is recommended to utilize only up to 85% of the transformer's capacity.



To prepare the landscape wire for connection, follow these simple steps:

- Strip 1/2 inch of insulation from both wires.
- Twist the exposed ends of the wires together tightly.

To connect the wires to the transformer, please carefully follow these step-by-step instructions:

 Carefully position the wires underneath each terminal plate and proceed to secure them firmly by tightening the screws.

After connecting the wires to the terminal blocks, it is vital to verify that they are securely and properly positioned. Follow these steps to ensure a secure connection and complete the installation:

- 1.Carefully inspect the terminal blocks to confirm that the wires are fully inserted and tightly secured within their respective terminals. Make sure there are no loose or exposed wires.
- 2.Gently tug on each wire to ensure it is firmly held in place and does not come loose. This step helps verify the stability of the connections.

By following these instructions, you will guarantee that the wires are securely placed within the terminal blocks, minimizing the risk of disconnections or electrical issues. Additionally, closing the casing properly provides protection to the internal components of the transformer.



RUN THE LANDSCAPE WIRE (SOLD SEPARATELY)

To ensure proper installation of the landscape wire, please follow these guidelines:

- When running the landscape wire, make sure it extends directly from the transformer to each light without any cuts or interruptions. This uncut wire connection helps maintain a consistent and reliable electrical flow throughout the lighting system.
- Exercise caution and avoid running the wire within a proximity of 10 feet (3 meters) to any pools, spas, or fountains. This safety measure prevents any potential hazards associated with water and electrical components. It is important to prioritize the safety of individuals and the proper functioning of the electrical system.
- In the event that the landscape wire is longer than needed, you may need to trim it to the appropriate length. To cut the wire, use a cable cutter specifically designed for this purpose. Ensure that the cable cutter is suitable for the wire's gauge and thickness. Following the manufacturer's instructions, carefully cut the wire to the desired length.
- By adhering to these instructions, you will ensure the integrity and safety of the landscape wire installation. The wire should remain uncut as it runs from the transformer to each light, while maintaining a safe distance from pools, spas, or fountains. If necessary, use a cable cutter to trim the wire to the required length.

When selecting the cable gauge, consider the distance between the transformer and the lighting fixtures. It is crucial to choose an appropriate gauge to ensure efficient power transmission and minimize voltage drop.

Please note that this chart provides general recommendations, and it is essential to consider specific factors such as the power requirements of your lighting system and any local electrical codes or regulations that may apply. Consulting with a qualified electrician can provide further guidance and ensure the proper selection of cable gauges for your specific installation.



HOW TO CHOOSE THE RIGHT LOW VOLTAGE WIRE:

| Feet | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 | 90 | 100 | 110 | 120 | 130 | 140 | 150 | 160 | 170 | 180 | 190 | 200 |
|-------|----|----|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Watts | | | | | | | | | | | | | | | | | | | | |
| 40 | 16 | 16 | 16 | 16 | 16 | 16 | 16 | 14 | 14 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 10 | 10 |
| 60 | 16 | 16 | 16 | 16 | 16 | 16 | 14 | 14 | 14 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 10 | 10 | 8 |
| 80 | 16 | 16 | 16 | 16 | 14 | 14 | 14 | 14 | 14 | 12 | 12 | 12 | 12 | 10 | 10 | 10 | 10 | 10 | 8 | 8 |
| 100 | 16 | 16 | 14 | 14 | 14 | 14 | 14 | 12 | 12 | 12 | 10 | 10 | 10 | 10 | 10 | 10 | 10 | 8 | 8 | 8 |
| 120 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 10 | 10 | 10 | 10 | 10 | 8 | 8 | 8 | 8 | 8 |
| 140 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 10 | 10 | 10 | 10 | 10 | 8 | 8 | 8 | 8 | 8 | 8 | 8 |
| 160 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 10 | 10 | 10 | 10 | 8 | 8 | 8 | 8 | 8 | 8 | 8 | | |
| 180 | 12 | 12 | 12 | 12 | 12 | 12 | 10 | 10 | 10 | 10 | 8 | 8 | 8 | 8 | 8 | 8 | | | | |
| 200 | 12 | 12 | 12 | 12 | 12 | 12 | 10 | 10 | 10 | 8 | 8 | 8 | 8 | 8 | 8 | | | | | |
| 220 | 12 | 12 | 12 | 12 | 12 | 10 | 10 | 10 | 8 | 8 | 8 | 8 | 8 | | | | | | | |
| 240 | 12 | 12 | 12 | 12 | 10 | 10 | 10 | 8 | 8 | 8 | 8 | 8 | | | | | | | | |
| 260 | 12 | 12 | 12 | 12 | 10 | 10 | 10 | 8 | 8 | 8 | 8 | | | | | | | | | |
| 280 | 12 | 12 | 12 | 10 | 10 | 10 | 8 | 8 | 8 | 8 | | | | | | | | | | |
| 300 | 12 | 12 | 12 | 10 | 10 | 10 | 8 | 8 | 8 | 8 | | | | | | | | | | |
| 320 | 12 | 12 | 10 | 10 | 10 | 8 | 8 | 8 | 8 | | | | | | | | | | | |
| 340 | 12 | 12 | 10 | 10 | 10 | 8 | 8 | 8 | 8 | | | | | | | | | | | |
| 360 | 12 | 10 | 10 | 10 | 8 | 8 | 8 | 8 | | | | | | | | | | | | |

- 1. LOWER GAUGE WIRES ARE THICKER AND CONTAIN MORE COPPER. THEY HAVE A GREATER CURRENT CARRYING CAPACITY FOR LONG RUNS
- 2. ITS BEST TO NOT EXCEED MORE THAN 80% OF YOUR LANDSCAPE WIRE CURRENT CAPACITY TO ENSURE THERE IS NO VOLTAGE DROP

EXAMPLE: IF YOUR TOTAL WATTAGE OF YOUR LANDSCAPE LIGHTS IS 40 WATTS, THEN YOU CAN RUN 200 FEET OF 12 GAUGE WIRE WITHOUT VOLTAGE DROP.


POWER UP THE TRANSFORMER

To test the fixtures and change the mode to "ON," please follow these instructions:

- Take the plug of the transformer and insert it into the GFCI plug. Make sure it is fully inserted and securely connected.
- Once the transformer is plugged into the GFCI plug, you can proceed with testing the fixtures. Turn on the power to the transformer.
- Set the mode switch to the "ON" position. This will activate the fixtures and provide a continuous power supply.

Observe the connected fixtures to verify that they are illuminated and functioning correctly. Check for any signs of flickering, dimness, or malfunctions.



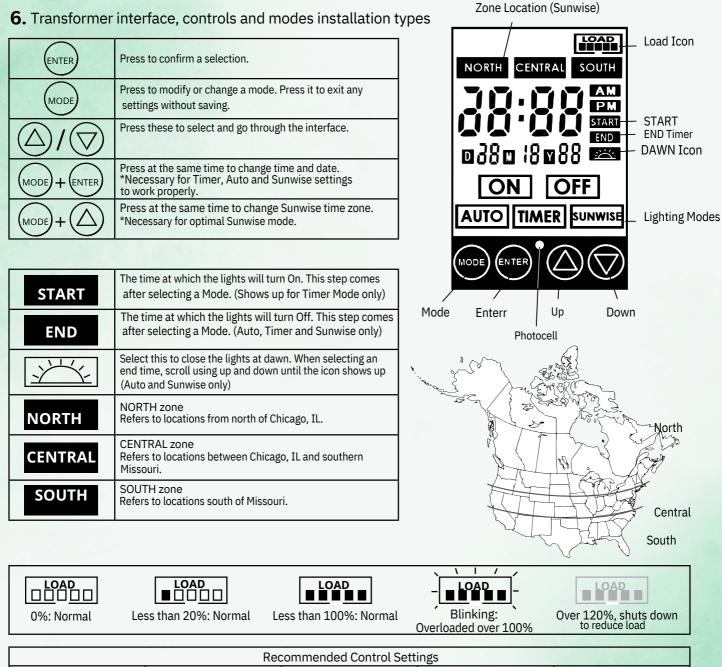

| Recommended Control Settings | | | | | | | | |
|------------------------------|--|---------|--------|--------------|--|--|--|--|
| Modes | Functionality | Outdoor | Indoor | Dusk-to-Dawn | | | | |
| ON | Always ON | YES | YES | NO | | | | |
| OFF | Always OFF | YES | YES | NO | | | | |
| TIMER | Fixed start and end time | YES | YES | NO | | | | |
| AUTO | Uses the light sensor (photocell) to Open/Close the lights | YES | NO | YES | | | | |
| SUNWISE | Astronomical timer auto- matically adjusts to local | YES | YES | YES | | | | |

^{*}The channels will only turn on at the exact start time selected for Timer and dusk for Sunwise.

7. How to setup the transformer for your lighting system

7.1 Current time & date setting

This step is needed for the lighting modes Auto, Timer and Sunwise to work properly or else they won't open/close at the right time.

- 1. Press both MODE and ENTER at the same time quickly.
- 2. Use **UP** and **DOWN** to select the date and **ENTER** to confirm. Apply the same procedure for the current time

7.2 Location setting (for Sunwise mode only)

Sunwise is a feature that does not need a photocell to operate. It can be installed indoor and it will still open the lights from dusk to dawn. All it needs is your local time and location to calculate the sun's position to estimate your local dusk/dawn time.

HOW TO SET UP

- 1. Press **MODE** and **UP** at the same time quickly.
- 2. According to the map at step #6, enter your location by selecting one of the three following options and pressing **ENTER** to confirm (if you live in Canada, select "North"):

7.3 Setting up a lighting timer schedule

This section will help you on how to setup a mode and program the opening/closing of the lights at the time you want.

HOW TO SET UP

- 1. Press MODE to access the timer mode settings
- 2. Refer to step #6: "Recommended Control Settings" and select one of the five lighting modes: On, Off, Auto, Timer, Sunwise.
- 3. **START** time settings ONLY FOR TIMER MODE. Select the hours and minutes at which you want the lights to turn ON.
- 4. **END** time settings ONLY FOR AUTO, TIMER AND SUNWISE LIGHTING MODES. Choose one of the two END time option:
- a) Dawn END time: select this option to make the lights close at dawn automatically every day. It will use the photocell if you selected the mode Auto and your location if you selected Sunwise. Scroll the hours until you see the **DAWN** icon and press **ENTER** to select it.
 - b) Fixed END time: select this option if you want the transformer to close the lights every day at the same hour. This type of END time will not adjust to the seasons, be it summer or winter, the END time will stay the same. To select this option, simply select the END time wanted.

Troubleshooting

All of the lights fail to work

- If the **LOAD** icon is flashing, make sure you are using less than 300 watts. If necessary, remove some fixtures and change the lighting mode to the desired one after.
- Check that the transformer power is ON.
- Check if there is a loose connection at the transfomer screw terminal.
- Check that the current mode is not set to «OFF».

The lights are "ON" during the day

• The power unit is in a dark area which triggers the photocell to turn ON the lights.

The lights do not switch "ON" at dusk

• The power unit is in a area where there is too much light at night.



The lights are not turning on after selecting Timer or Sunwise mode.

• Timer and Sunwise mode only open up at their exact start time setting (Start for timer and dusk for Sunwise). Ex: if it is 8 PM at your location and you set the start time to 7 PM, the channel won't turn on until 7 PM the next day.

There is a significant delay in Sunwise mode.

• Make sure that you selected the right zone. If you live far to the north, or far to the south, Sunwise may not be optimal.

Maintenance

| • To clean, | wash | with a | damp | soft | cloth. |
|-------------|------|--------|------|------|--------|
|-------------|------|--------|------|------|--------|